

# WINDOW ALERT

## **Features:**

- Sensitive motion sensor detects intruder break-ins at a window.
- Easily attachable to windows.
- Loud 95 dB alarm.

## **To Install Battery:**

Open the battery cover from the front and install the included 3 x 1.5V button cells (AG13, LR44 or , A76).

## **To Operate**

1. Attach the Window Alert to the window by using the double-sided foam tape.
2. Turn the switch to the on position. After 5 seconds, you'll know the Alert is in "ON mode" when you hear one beeping sound.
3. The Alert will be activated for 20 seconds every time the sensor detects unauthorized window moving or knocking.
4. To ensure the Alert is working properly, always test the alert's battery status by knocking the window slightly.

## **Warning:**

1. This high decibel alarm can injure your ear if you are too close!
2. This alarm contains little parts not suitable for small children.