

OPERATION

- Work as a LED Torch-
 - Press the button on top to ON the LED light. Release the button to OFF (see drawing)
- Work as a Door / Window Alarm (see drawing)
 - Slide off the clips
 - Take out the transparent strap but keep the clips stay together without apart, because alarm will go off if the two clips were apart.
 - Insert the clips into the door / window slits, then alarm is in armed mode
 - Once the unauthorized intruders open the door or window, the clips will be apart and a high pitch alarm sound will be heard
 - Touch the two clips together to OFF the alarm

BATTERY INSTALLATION

- When the LED light becomes weak or the alarm sound becomes quieter, then you need to replace batteries
- Make sure the clips are close together and inserted into the alarm
- Slide off the battery cover on the back (see drawing)
- Install 2pcs fresh CR2032 (included)
- Replace the battery cover

CAUTION

- The unit is not considered to be weather proof, so please do not expose the unit to rain.
- Ensure that the unit has a good battery to operate as a security guard. Check its power condition frequently.
- The piercing high pitch alarm sound might injure the hearing if it's too close to the ears.
- This alarm contains small parts, and it is not suitable for small children.

