

MINI ALARM

FEATURE

- Stylish design with sleek color
- Amazingly small in size
- Simple emergency ripcord activation
- High pitch alarm sound
- The best personal emergency alarm

HOW TO REPLACE (INSTALL) BATTERY?

- Make sure the ripcord is inserted completely inside of the alarm before replacing (installing) battery.
- Unscrew the back cover
- Follow the polarity instruction (see drawing) to Insert 1pc of fresh CR2032 (included)
- Replace the cover gently

HOW TO OPERATE?

- Pull the ripcord for an emergency to scare the assailant.

NOTE:

Always clip the MINI ALARM on the strap of your apparel or purse. Do not put it inside of your pocket or purse.

WARNING:

- The piercing high pitch alarm sound might injure the hearing if it's too close to the ears.
- This alarm contains small parts, and it is not suitable for small children.

