


# SLIM WINDOW ALARM

- Ultra slim in size design
- Sensitive vibration sensor built in
- Powerful high pitch alarm sound

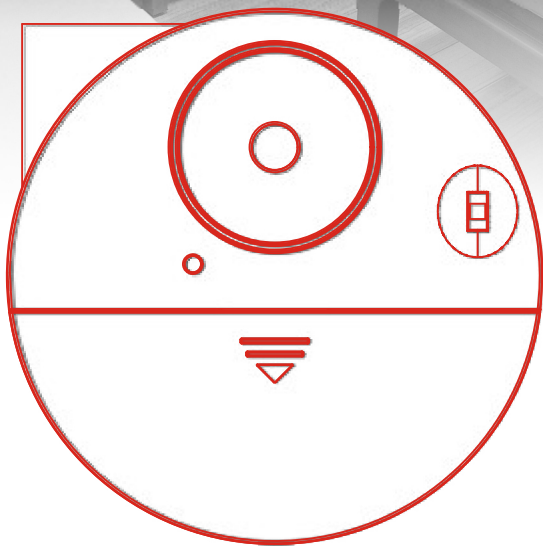

The perfect guarding device for  
all house windows



### **Battery Installation/Replacement:**

- Slide off the battery cover in the lower part of the front panel
- Follow the polarity instruction to install 3 fresh AG13 (LR44) button cell batteries (included)
- Gently replace the battery cover

### **Installation:**

- Peel off the adhesive sticker on the back of the Window Alarm then attaching it on the window glass

### **Operation:**

- Slide the ON/OFF switch to ON
- After 3 seconds of LED flashing, a short beep will be heard. The window alarm is now ARMED
- The alarm will sound immediately for 30 seconds once it detects strong vibration or shocking, such as, glass breaking or forceful intrusion. The alarm will return to ARMED status after activation
- You can stop the alarm at any time by sliding the switch to OFF
- If the alarm sound becomes weak, the battery needs to be replaced

### **Note:**

- The unit is not considered to be weatherproof, so please do not expose it to rain
- The high-pitched alarm sound may injure the hearing if in close proximity to the ears
- For better performance, ensure the unit has good battery power. Check its power condition every certain period
- It is suggested the unit be mounted at least 5 feet from the floor to keep it out of the reach of small children




DX-A160

Pat. Pending Made in China



THE PAPER BOARD IS RECYCLABLE



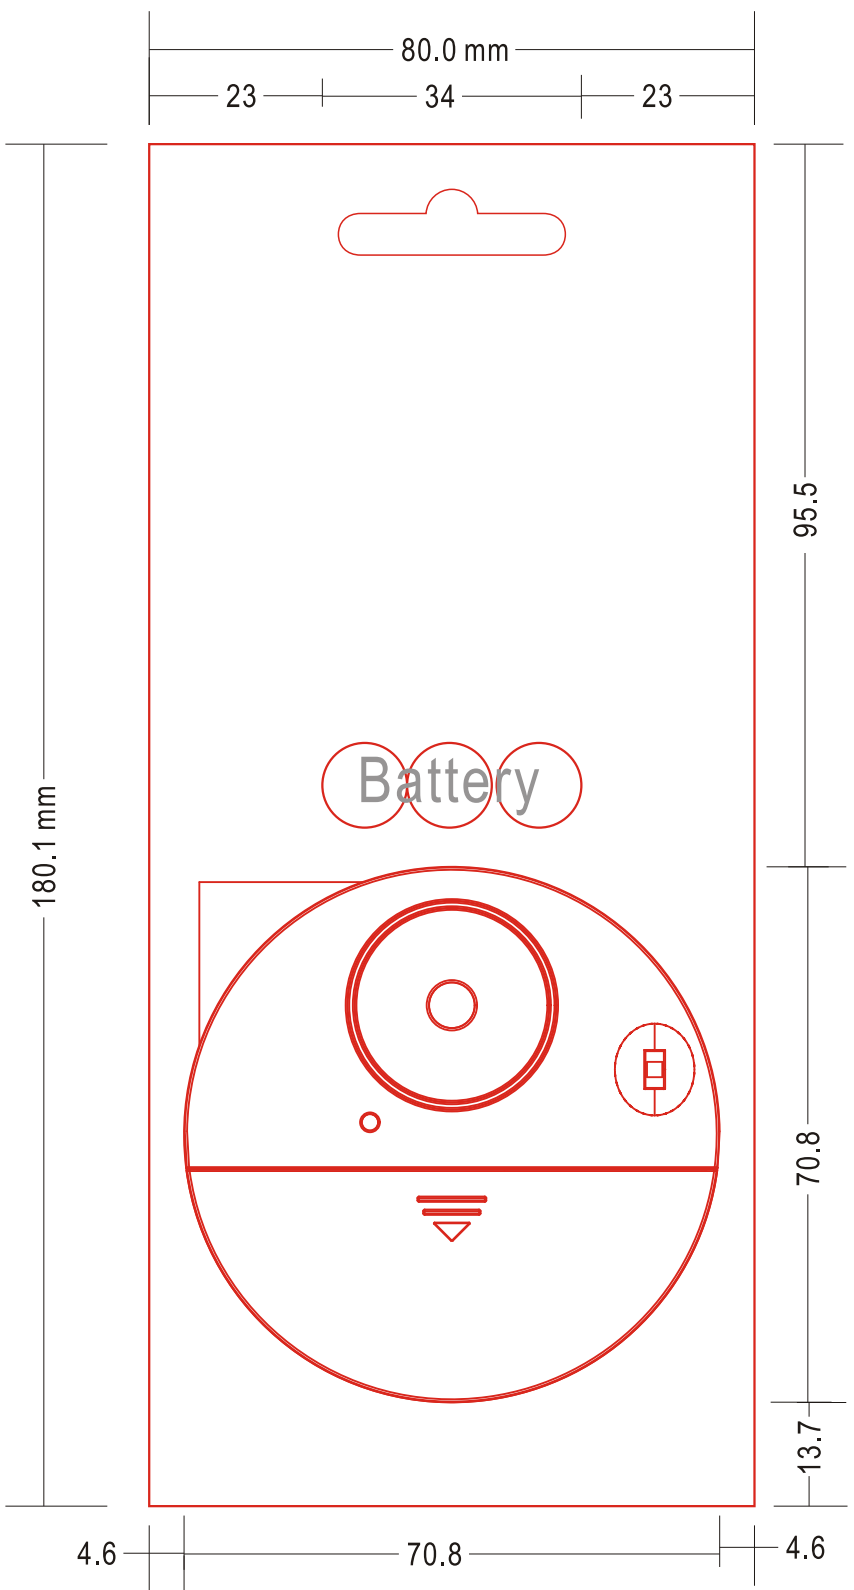

80.0 mm

23

34

23

180.1 mm

95.5

Battery

70.8

13.7

4.6

70.8

4.6