

DOOR/WINDOW ALARM

PACKAGE INCLUDES

- SLIM ALARM...1PC
- AG 13 BUTTON CELLS...3PCS
- MAGNETIC SENSOR SWITCH...1PC

INSTALLATION

- Take off the double side tape that attached on the back of the Slim Alarm and attach the Slim Alarm on the door/window frame.
- Affix the magnetic sensor switch close to the Slim Alarm and keep the three lines marking align with the "▶" on the Slim Alarm (see drawing I).
- For best performance, please keep the distance between the Slim Alarm and magnetic sensor switch no wider than 1.5cm.

BATTERY INSTALLATION

- Slide down the battery cover in the lower part of front panel.
- Follow the polarity instruction (see drawing II), and install 3 fresh Ag13 (LR44) button cell (included)
- Slide up the battery cover gently.

OPERATION

- Make sure the magnetic sensor switch is properly affixed.
- Slide the ON/OFF switch to ON.
- After 5 seconds of LED flashing, a short beep will be heard to indicate the Slim Alarm is ARMED.
- An immediate alarm sound will go off continuously for 20 seconds once the door or window is opened.
- Alarm will return to the ARMED mode after 20 seconds alarm sound.
- You can also stop the alarm at any time by sliding the switch to OFF position.
- When the Slim Alarm is ARMED, if the LED stays ON, then this is referring that battery power is low. You need to replace with fresh batteries.

NOTE

- The unit is not considered to be weather proofed, so please do not expose the unit to rain.
- Ensure the unit has good battery to operate as a security guard, check its power condition every certain period.
- Suggest mounting the unit at least 150cm in height to keep away from children's reaching.

